

Nuvo-9200VTC Series Intel® 13th/ 12th-Gen Core™ in-vehicle controller with 4x M12/ 4x RJ45 / 8x RJ45 PoE+ ports, single-slot PCIe Cassette



Key Features

Introduction

Nuvo-9200VTC is Neousys' latest rugged in-vehicle controller based on Intel® 13th/ 12th-Gen Core™ processors. Benefiting from cutting-edge Intel® 7 photolithography, the latest Core™ desktop processors come with up to 24 cores/ 32 threads, offering an incredible boost of computational performance. Combining DDR5 memory bandwidth throughput and PCIe Gen4 NVMe high-speed disk read/write, users can expect an overall system performance improvement of up to 1.8x when compared to previous 10th or 11th-Gen platforms.

Nuvo-9200VTC offers an assortment of peripherals, connections, and expansion flexibility. It has 2.5Gb and 1Gb Ethernet ports, and four or eight 802.3at PoE+ ports to supply 25W of power to connected devices such as IP cameras. The system also has x-coded M12 connectors and screw-lock mechanisms on I/Os like Ethernet, USB 3.2 Gen1 and USB 3.2 Gen2 to guarantee extreme rugged connectivity in shock/ vibration environments. Internal expansion wise, there are two M.2 and three mini-PCIe sockets to install 5G/ 4G, WiFi, GPS, and CAN module for wireless communication.


On top of all that, the system is E-Mark certified and has a patented Cassette module with an additional PCIe slot for an add-on card, making it that much more flexible for in-vehicle applications. Nuvo-9200VTC also features two hot-swappable SATA HDD trays, an isolated CAN bus for in-vehicle communication, isolated DIO for sensor/ actuator control, 8V to 48V wide-range DC input with ignition power control. The Nuvo-9200VTC series is a flexible and reliable solution for various in-vehicle applications.


Specifications

System Core			Expansion Bus		
	Supporting Intel [®] 13th-Gen Core™ CPU	Support Intel [®] 12th-Gen Core™ CPU	PCI/PCI Express	1x PCIe x16 slot@Gen3, 16-lanes PCIe signals in Cassette	
Processor	(LGÅ1700 socket, 65W/ 35W TDP) - Intel [®] Core [™] i9-13900E' i9-13900TE - Intel [®] Core [™] i7-13700E - Intel [®] Core [™] i5-13500E/ i5-13400E/ i5- 13500TE - Intel [®] Core [™] i3-13100E/ i3-13100TE	(LGÅ1700 socket, 65W/ 35W TDP) - Intel [®] Core [™] i9-12900E/ i9-12900TE - Intel [®] Core [™] i5-12900E/ i7-12700TE - Intel [®] Core [™] i5-12500E/ i3-12100TE - Intel [®] Core [™] i3-12100E/ i3-12100TE - Intel [®] Core [™] i3-02100TE - Intel [®] Core [™] i3-02100TE - Intel [®] Coleron [®] G6900E/ G6900TE	Mini PCI Express	1x full-size mini-PCIe socket 2x full-size mini-PCIe sockets (USB signals only) with internal SIM sockets	
			M.2	1x M.2 2242/3052 B key socket with SIM slot for M.2 5G/ 4G module $1x$ M.2 2242/3052 B key socket with SIM slot for M.2 4G module	
Chipset	Intel [®] Q670E platform controller hub		Power Supply		
Graphics	Integrated Intel [®] UHD Graphics 770 (32EU)		DC Input	1x 3-pin pluggable terminal block for 8V to 48V DC input (IGN/ GND/ V+)	
Memory	Up to 64 GB DDR5 4800 SDRAM (two SODIMM slots)				
AMT	Supports Intel vPro/ AMT 16.0		Ignition Control	Built-in ignition power control	
ТРМ	Supports dTPM 2.0		Remote Ctrl. & LED Output	1x 3-pin pluggable terminal block for remote control and PWR LED output	
I/O Interface			Mechanical		
Ethernet port	1x 2.5G Ethernet by I225-IT and 1x Gigabit Ethernet by I219-LM with screw-lock		Dimension	240 mm (W) x 225 mm (D) x 103 mm (H)	
PoE+	4x IEEE 802.3at Gigabit PoE+ ports by Intel [®] I210 - M12 X-coded connector (Nuvo-9200VTC) - RJ45 connector (Nuvo-9204VTC) 4x IEEE 802.3at Gigabit PoE+ ports by Intel [®] I210 and 4x 2.5G PoE+ ports by I225-IT - RJ45 connector (Nuvo-9208VTC) 1x USB 3.2 Gen2x2 (20 Gbps) port in type-C connector with screw-lock 4x USB 3.2 Gen2x1 (10 Gbps) ports in type-A connectors 2x USB 3.2 Gen1x1 (5 Gbps) ports in type-A connectors 2x USB 3.2 0ports		Weight	3.9kg	
			Mounting	Wall-mount with damping bracket	
			Environmental		
			Operating Temperature	With 35W CPU -40°C ~ 70°C ⁽¹⁾ (with 1 memory module installed)	
USB 3.2				-40°C ~ 60°C ^{[2]3)} ((with 2 memory modules installed) With 65W CPU	
USB 2.0				-40°C $\sim 50^{\circ}C^{^{[2][3]}}$ (configured as 65W TDP with 2-slots memory)	
CAN Bus	1x isolated CAN 2.0 port		Storage Temperature	-40°C to 85°C	
Video Port		1x VGA, supporting 1920 x 1200 resolution		10% to 90% , non-condensing	
(Integrated Graphics)	1x DVI-D, supporting 1920 x 1200 resolution 1x DisplayPort, supporting 4096 x 2304 resolution		Vibration	MIL-STD-810H, 514.8, Category 4	
Serial Port	2x software-programmable RS-232		Shock	MIL-STD-810H, 516.8, Procedure I	
	2x RS-232 ports (COM3/COM4)		EMC	E-Mark, EN 50121 (EN 50155 EMC)	
Isolated DIO	4-CH isolated DI and 4-CH isolated			CE/FCC Class A, according to EN 55032 & EN 55035	
Audio	1x 3.5 mm jack for mic-in and speaker-out		⁽¹⁾ Due to high heat generation of DDR5 memory, please configure the CPU to 35W mode and utilize only one memory slot, while operating at a temperature of 70°C.		
Storage Inter			^[3] For CPU operating at 6	temperature, a wide temperature HDD or Solid State Disk (SSD) is required. 55W mode, the highest operating temperature shall be limited to 50°C and therma	
SATA HDD	2x hot-swappable HDD trays for 2. RAID 0/ 1	5" HDD/ SSD installation, supporting	throttling may occur when sustained full-loading applied. Users can configure CPU power in BIOS to allow high operating temperature.		
M.2	1x M.2 2280 M key socket (PCIe Gen	4 x4) for NVMe SSD			

Nuvo-9200VTC Series



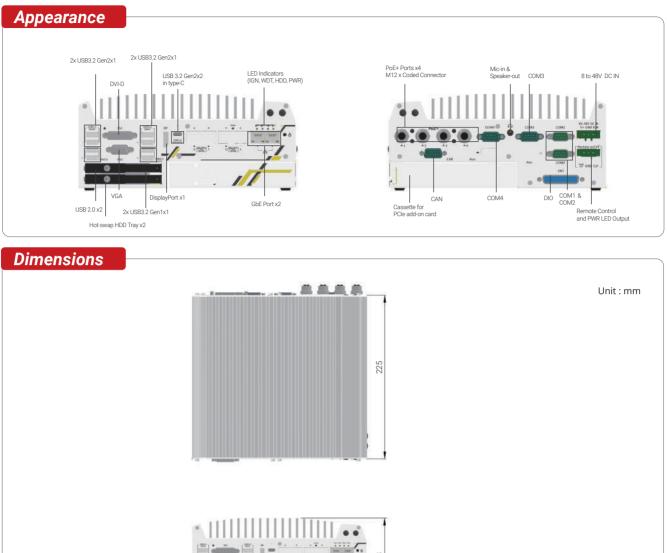



Ordering Information

Model No.	Product Description
Nuvo-9200VTC	Intel [®] 13th/ 12th-Gen Core [™] in-vehicle controller with 4x M12 PoE+ Ports, DIO, CAN bus and RAID, single-slot PCI Express Cassette
Nuvo-9204VTC	Intel [®] 13th/ 12th-Gen Core [™] in-vehicle controller with 4x RJ45 PoE+ Ports, DIO, CAN bus and RAID, single-slot PCI Express Cassette
Nuvo-9208VTC	Intel [®] 13th/ 12th-Gen Core [™] in-vehicle controller with 8x RJ45 PoE+ Ports, DIO, CAN bus and RAID, single-slot PCI Express Cassette

Optional Accessories

Cbl-M12X8M-RJ45F- 100CM	M12 (8-pole-X-coded) to RJ45 Female, CAT6A, Length : 100CM
Cbl-M12X8M-RJ45- CAT6A-500CM	M12 (8-pole-X-coded) to RJ45, CAT6A, Length : 500CM
Fankit-25	Fan assembly for 1-slot Cassette, 25x25x10 mm
PA-280W-ET2	280W AC/DC power adapter 24V/ 11.67A ; 16AWG/ 100cm; cord end terminals for terminal block, operating temperature : -30°C to 60°C.